# XO<sup>®</sup> 4 RETROFIT XO HD DISPLAY FOR EXISTING LONG ARM

YB-984 Version 1.10

XO CARE A/S Usserød Mølle Håndværkersvinget 6 DK 2970 Hørsholm Denmark

+45 70 20 55 11 info@xo-care.com www.xo-care.com



#### This instruction covers XO-617:

Retrofit XO HD Display for existing long arm to fit XO 4 workstations supplied after 2005

XO cable set for XO HD Display.






When making changes and handling electronics in the XO 4 Unit – always use ESD antistatic wristband (UC-600).





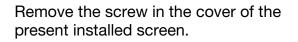



Remove the cover, and the attachment bolts in the monitor.





Disconnect the cables.

Remove the monitor.







### Loosen the adjustment screw.

Unscrew the wire clamp bolt.




Unscrew the bracket attachment bolt.

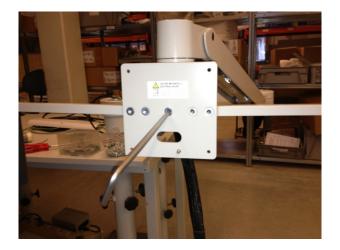

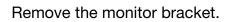





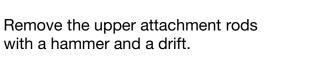




Remove the lower attachment rods with a hammer and a drift.

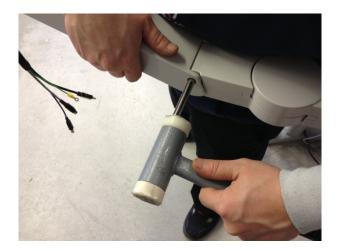

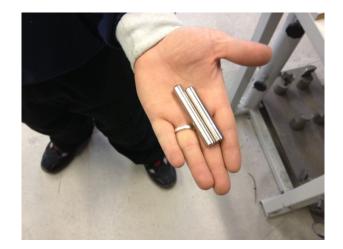

The 2 attachment rods.

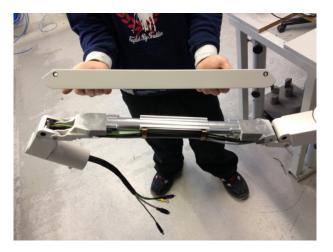


Remove the U-profile.


Now remove the complete Monitor arm from the unit.

Remove the wire clamps of the rear arm.



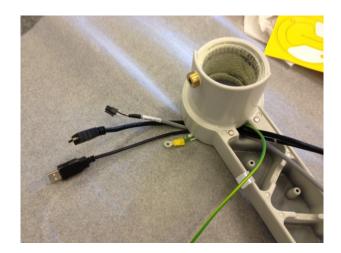

Pull the cables out of the arm.

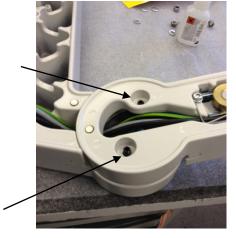

Unscrew the two 6 mm nuts.

Gently lift up the forward arm.








Inspect the bracket.

Remove the forward arm from the aft arm.

Remove the cable protection bracket.






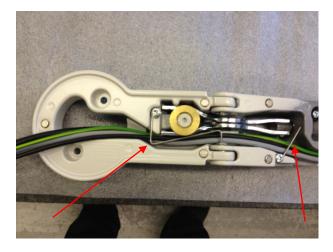


Remove the cable holders.

Pull out the cables from the arm.


Remove the cable holder bolt.

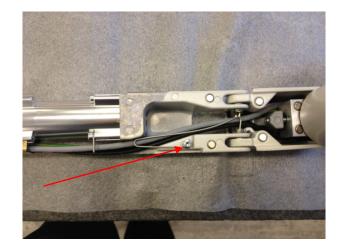

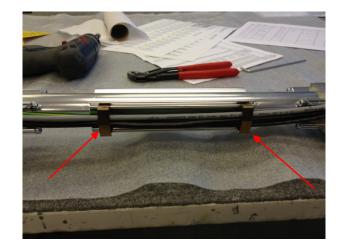

Remove the wire clamps.


Remove the attachment bolt from the monitor joint.

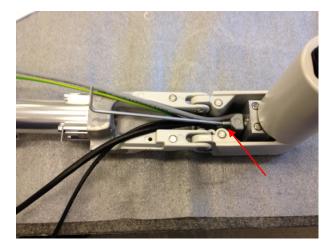

Now remove the cable with the rotatable joint.



Remove the locking ring.

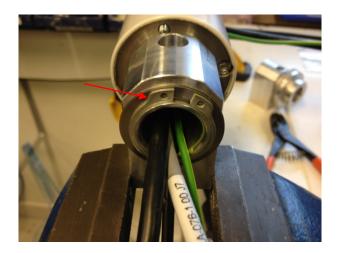





Be aware of the locking ring and the spacers.

Unscrew the attachment bolt.



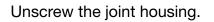




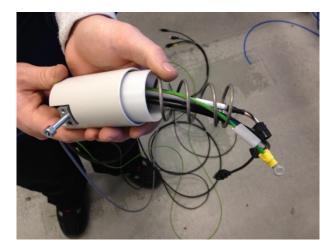

Pull out the cables.

Install the new cable set in opposite order, and pay special attention to the following!

1. Make sure that all the spacers are in position!

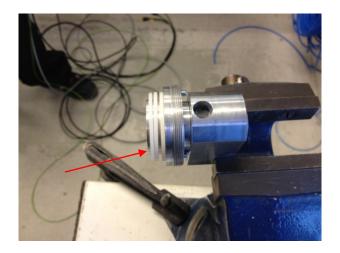




Page 14 of 20

3. Make sure there is a small gap between the tube and the support bracket!


4. Make sure the cables are aligned in the arm. 2 cables on each side of the bolt attachment!

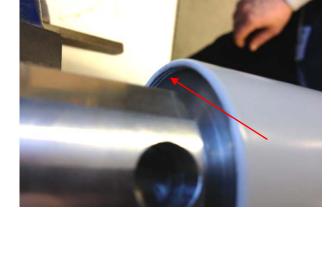





XO CARE A/S

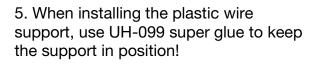


6. Use a torque wrench when installing the 2 self locking nuts. Torque the nuts step by step and check the bearing tolerance in between each torque sequence. The nuts must only be torque to a maximum of 0,9 Nm!

7. Install the yellow warning labels!





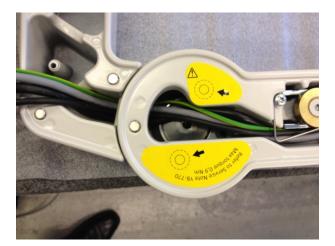

#### 8. Adjustment of spring for balance.

Adjust the balance of the arm by turning the adjustment screw CW or CCW. 1 turn CW means adding 200g lifting capacity. 1 turn CCW means reducing the lifting capacity with 200 g.

Use an Allen key in order to adjust the spring. See the HD display weight on the Display label. Adjust the setting following these instructions:



Existing screen to HD display 3,9 kg. XO Screen 15" (3,9 kg) No adjustment necessary.


Existing screen to HD display 4,2 kg.XO Screen 15"(3,9 kg)Turn screw 1,5 times CW.

Existing screen to HD display 4,2 kgXO Widescreen 19"Turn screw 1,5 times CCW.

Existing screen to HD display 3,9 kg XO Widescreen 19" (4,5 kg) Turn screw 3 times CCW.



9. Install the ferrite block on the power supply cable!

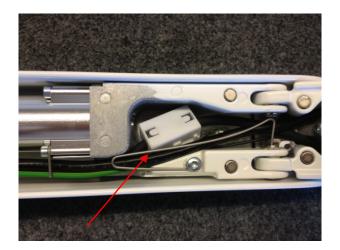


10. Remember to install the ground wire connection from the HD Display. Use the black wire to pull the cable through the arm joint!



Install the new handle operation arm.

Install the new Vesa bracket.

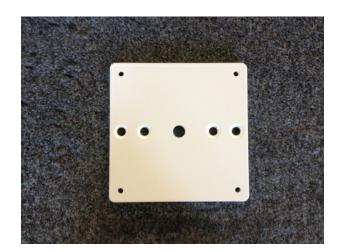

Remove the old handle attachments.





Install the set screws in the new handle operation arm.

Install the old handle attachments to the new handle operation arm.



Install the old handles.





Install AD-632 print in the Unit stand.

When cable replacement is complete, install the monitor arm on the unit, and install the HD Display.



XO<sup>®</sup> HD Display Installation Guide





25e. m. 42 0.0 Jerso 1 02

## Important!

Please fill in document YB-970 attached to this installation guide.

Documentation for proper Sphering of lasts in XD 4 animet and	
Technikaraprof continui ha Mari 1928 ten	Examined to have higher and Error Looks in the Larks of the power an
angua waanch Bas, Balturia	
alays secold. gen	
and service	
ated calibrative data or Estate-Selection	
lepteoment date y erven oskile	
laikute	
C-F-G-R	
upter) Piper	
larm of adviciant	
identifi) gestre	
have many the black of charge	weis .
C-CAVE A/I Biodoplatorrgat () SI/I Handsalin Istmark	
in the attention of Talesiak Dav	nee.
	Destitut starraj.